

**Beeper Collar  
&  
Remote Controlled Beeper Collar  
Owner's Manual**



**BTB 800**  
**BARITONE BEEPER**

**BTB 809**  
**REMOTE CONTROLLED MODEL**

 **D.T. SYSTEMS, INC.**

## TABLE OF CONTENTS

- Introduction..... 3
- Product Overview ..... 3
- Features ..... 4
- Package Contents ..... 4
- BTB 800 Parts & Functions ..... 4
- BTB 800 Operation..... 5
- BTB 809 Parts & Functions ..... 6
- BTB 809 Operation..... 6
- Recharging the Collar Battery ..... 7
- Changing the Remote Battery  
(BTB 809) ..... 8
- Troubleshooting Q & A ..... 8
- Getting Your Dog  
Accustomed to the Sound ..... 10
- Warranty ..... 11
- Contact Information ..... 12

## **INTRODUCTION**

### **Thank you for choosing a D.T. Systems Beeper Collar!**

The BTB 800 and BTB 809 give you the ability to keep track of your dog's location when he is out of sight and lets you know when he has gone on point. This allows you to find the dog quickly and prevents you from making the mistake of calling the dog to you when he's on point.

The BTB 800 and BTB 809 beeper collars are light weight and built to withstand the rugged conditions and heavy cover dogs often encounter.

The use of both the sound booster element and the long duration, double beep make the BTB 800 and BTB 809 collars much easier to hear at long range. (Actual yardage will vary depending upon the relative position of yourself and your dog and other variables such as cover and wind speed and direction).

## **PRODUCT OVERVIEW**

The BTB 800 and BTB 809 have two operating modes, Run/Point and Point only.

- When Run/Point is selected the collar will emit a double beep every five seconds while the dog is running and will emit a double beep every two seconds when the dog is on point.
- When the Point only mode is selected the collar will emit a double beep every two seconds when the dog is on point but will remain silent when the dog is running.

The on/off switch must be depressed for two full seconds to shut the collar off. This prevents the collar from accidentally shutting off when the dog is running through heavy cover.

## FEATURES

- Easy Operation - One touch push button system.
- Long Range Audibility - Audio booster element.
- Reliability - State-of-the-art microcomputer technology.
- Two Operating Modes - Run/Point, or Point only.
- Rechargeable Batteries - Charger included.
- Remote Control Activation - (BTB 809 only) 250 yard range.

## PACKAGE CONTENTS

 
### BTB 800

- Beeper Collar
- Battery Charger
- User's Manual

### BTB 809

- Beeper Collar
- Remote Control
- Battery Charger
- User's Manual

## BTB 800 PARTS & FUNCTIONS

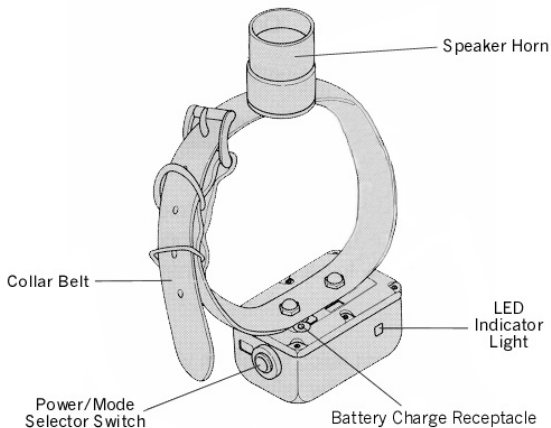

## BTB 800 OPERATION

### **Turning the unit ON:**

 
To turn the BTB 800 ON, depress the Power and Mode Selector Switch for approximately two seconds. (When you press the switch the LED indicator will light for two seconds. As soon as the light goes out you may let go of the switch). The unit is now ON. The LED light will blink once every two seconds.

### **Turning the unit OFF:**

Turning the BTB 800 OFF works the same way as turning it on, depress the Power and Mode Selector Switch for approximately two seconds. (When you press the switch the LED indicator will light for two seconds. As soon as the light goes out you may let go of the switch). The unit is now OFF.

The BTB 800 has Two Operating Modes. Run/Point and Point only. When the unit is first turned on it is automatically set to Run/Point mode. To switch to Point only mode quickly depress the Power and Mode Selector Switch (less than one second). The LED indicator light will blink once and then resume blinking once every two seconds.

## BTB 809 PARTS & FUNCTIONS

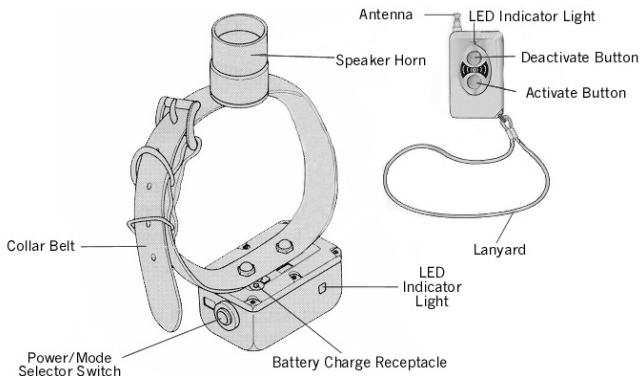

## BTB 809 OPERATION

### **Turning the unit ON:**

To turn the BTB 809 ON, depress the Power and Mode Selector Switch for approximately two seconds. (When you press the switch the LED indicator will light for two seconds. As soon as the light goes out you may let go of the switch). The unit is now ON. The LED light will blink once every two seconds.

### **Turning the unit OFF:**

Turning the BTB 809 OFF works the same way as turning it on, depress the Power Switch for approximately two seconds. (When you press the switch the LED indicator will light for two seconds. As soon as the light goes out you may let go of the switch). The unit is now OFF.

 
The BTB 809 Remote Control can be used to activate or deactivate the unit from up to 250 yards away. While the unit is ON simply depress the Top button to deactivate the collar. To reactivate press the Bottom button.

The BTB 809 has Two Operating Modes. Run/Point and Point only. When the unit is first turned on it is automatically set to Run/Point mode. To switch to Point only mode quickly depress the Power and Mode Selector Switch (less than one second). The LED indicator light will blink once and then resume blinking once every two seconds.

## RECHARGING THE COLLAR BATTERY

The LED Indicator Light will let you know when the battery needs charging by changing from the regular two second blink to a rapid blink (twice per second).

**NOTE:** If the batteries have been allowed to completely run down then the light will not blink at all.

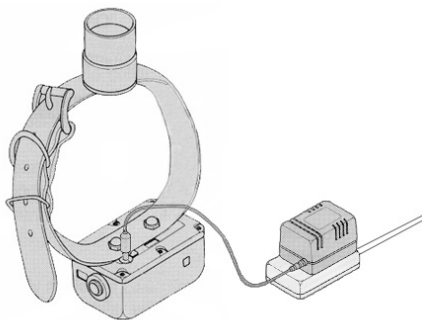


To charge the battery, plug the charger into the battery receptacle on the collar and plug the adapter into any standard 110 Volt household wall outlet. (A 220 Volt European adapter is available from D.T. Systems).

Recharge the battery for no more than 14 hours.

**Important:** After charging make sure to plug in the rubber receptacle plug firmly to prevent dirt and water from entering the unit.

## CHANGING THE REMOTE BATTERY (BTB 809)

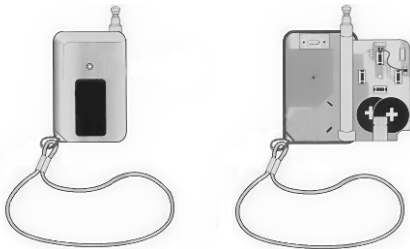 

1. Unscrew the small screw on the back of the Remote Control unit.
2. Replace both 3 Volt watch style batteries as shown below.

### **Note:**

Watch “+” “-” while installing. If battery is installed backward it may cause the unit to operate in Vibration mode only.

## TROUBLESHOOTING Q & A

1. Q : My Collar’s range is not as far as when I first bought the unit.  
A : (a) Test batteries. They may be low.  
(b) Fully extend transmitter antenna.
2. Q : The unit is not working after I replaced the battery.  
A : You might have installed the batteries incorrectly.  
Re-read the section of this manual on “Changing the Remote Battery” very carefully and try again.
3. Q : The LED Lights on my Transmitter and Collar/Receiver have gotten very dim.  
A : This indicates a low batteries. You may continue to use the unit until it stops working.



## TROUBLESHOOTING Q & A CONT.

4. Q : My Transmitter LED lights when any button on the transmitter is pushed, and the collar LED is blinking (indicating the unit is ON), but the unit is not working.
- A: The transmitter and collar frequencies are not in synch. Try the following procedure to restore...

1. Turn the collar ON by depressing and holding the Power and Mode Selector Switch for approximately two seconds. **DO NOT STOP PRESSING THE SWITCH.**
2. Keep the switch held down until you hear 3 quick beeps from the collar. (This takes about 10 seconds).
3. Now push one of the buttons on the Transmitter (it does not matter which button you push).
4. You should now hear a series of 5 quick beeps.
5. Turn the unit OFF, (by depressing and holding the Power and Mode Selector Switch for approximately two seconds) and then turn it back ON.
6. If the unit is still not working repeat steps 1-5.

## GETTING YOUR DOG ACCUSTOMED TO THE SOUND

- Turn on the collar and leave it outside the dog's kennel area for about a half an hour. Make sure you leave the mode set at Run/Point and do not change the mode to Point only.
- Repeat this several times, until you can see that the dog is disregarding the beeper.
- Next, fill the Speaker Horn with tissue paper and fit the beeper collar on the dog. Let him run around a little while. Gradually remove the tissue paper as the dog becomes more accustomed to the beeping sound. Now when you take him hunting he will not be bothered by the sound of the beeper.

## WARRANTY

All BTB beeper collars have a One Year Parts and Labor Warranty, effective from the original date of purchase. (A copy of the original sales receipt is required to validate the date of purchase).

### NOTE

BTB 809 Remote Control batteries are replaceable/disposable and are not covered under the warranty.

Damage by user, abuse or loss of parts, and attempted repair damage by the user or his agent are not covered by warranty. All repairs, whether warranted or not, should be sent to the address on the last page of this manual.



**D.T. Systems, Inc.**

2872 Walnut Hill Lane

Dallas, Texas 75229

Tel: (214) 350-9446, (888) LUV-U-DOG

Fax: (214) 350-7847

Website: <http://www.dtsystems.com>

E-mail: [customerservice@dtsystems.com](mailto:customerservice@dtsystems.com)