

190DT NO BARK TRAINER



MODEL 190-DT



D.T. SYSTEMS, INC.


2872 Walnut Hill Lane
Dallas, Texas 75229

Tel: (214) 350-9446 Fax: (214) 350-7847


www.dtsystems.com

customerservice@dtsystems.com


READ BEFORE USING YOUR NO BARK TRAINER!

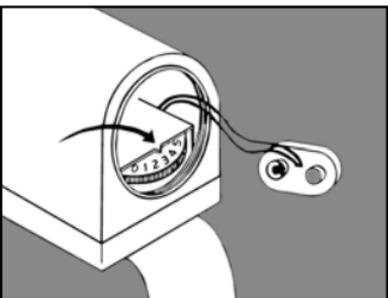

1. There are Ten different stimulation levels (0~9). When first using the collar, set intensity level to position (0). If this level provides insufficient stimulation to correct behavior, increase the level one step at a time.

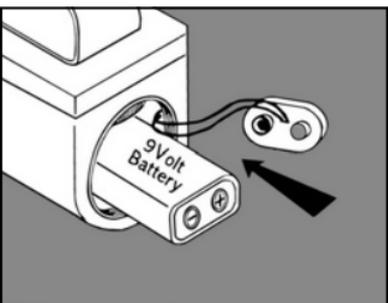

2. Use a standard 9 volt battery (rechargeable batteries are O.K.). Insert the battery as shown in the picture.

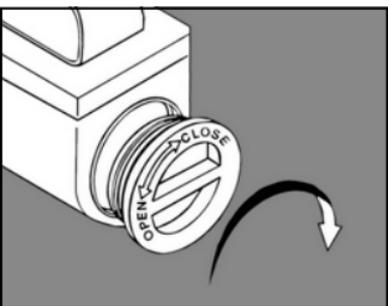

3. Be sure to screw cap firmly into the collar battery compartment. If not screwed in properly cap could be lost and moisture may enter the unit and damage the circuit board, which would render the system inoperable.

- System utilizes a one-half second stimulus with a four second safety delay between stimuli. Therefore if the dog barks during the four second delay the collar will not activate.
- System is activated by vocal cord vibration only and cannot be activated by extraneous sounds.
- When used properly the 190DT is completely Waterproof.
- Never use in an unsupervised environment.

CAUTION!

- Before beginning training with a no bark collar, your dog should be examined by a veterinarian to make sure that there are no physiological reasons for the excessive barking and to assure that your dog is in good health.
- Your 190DT is a valuable tool if used correctly. It is very important for you to understand the collar and how to train with it before placing it on your dog.
- Since no electronic device is perfect, there is always a possibility that your dog may receive an unintentional electric stimulation. This is a very slight possibility, but to decrease the risk of this occurring, never leave the unit on your dog unsupervised.
- The 190DT uses stainless steel electrodes to help prevent any harmful chemical or allergic reactions to your dog's skin.
- Sometimes normal wear of the collar will cause irritation on a dog's neck. For this reason the dog should be allowed a rest period of not less than twenty-four hours. Close inspection of the dog's neck should be made daily. If the dog shows signs of irritation, the collar should be removed until the neck returns to normal.
- Use of the correct length of electrodes is very important. The electrodes should be long enough to make good contact with the skin without preventing the vibration sensor from being positioned firmly against the neck. With some dogs it may be helpful to thin out some of the thick hair in the neck area.
- Proper collar tightness is extremely important. If the collar is too loose it will not function properly, and if it is too tight it could cause the dog difficulty with breathing.


POSITION

Place the collar firmly against the dogs neck with the vibration sensor against the dogs voice box. This is usually closer to the head than the shoulder. This will allow the sensor to easily pick up the vibrations. Assure proper tightness.



ALWAYS TEST THE UNIT WHEN IT IS OFF THE DOG!

1. Insert a 9 volt battery properly (+,-) into the battery compartment (if not, the unit will not work).
 2. Screw cap tightly into the compartment (if not, moisture will ruin the system).
 3. Place the Test Light on the electrodes.
 4. Roll the handle of a screw driver around the black nipple on the sensor. (Your finger will not produce enough vibration to activate the collar).
 5. If the test light comes on, the unit is working properly.
 6. If you want to test again you must wait 4 seconds.
- *Be sure that the electrodes do not touch any part of your body!***

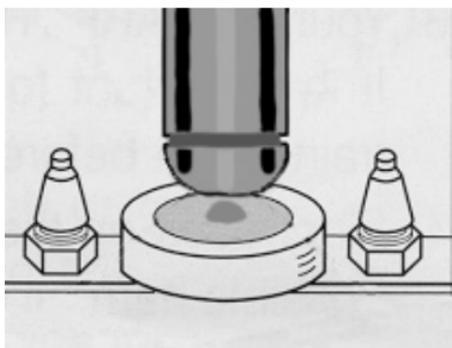

LIMITED WARRANTY

D.T. Systems, Inc., warrants to the original owner of a new 190DT No Bark Trainer that it is free from defects in materials and workmanship. If, within one year from the original date of purchase, it proves to be defective, simply return the unit to: D.T. Systems, Inc. 2872 Walnut Hill Lane, Dallas TX 75229. This warranty does not cover damage resulting from improper use, accidental damage, or abuse of the unit. Use of unauthorized replacement parts will void this warranty. For more information on the warranty call (214) 350-9446.